edwardsvacuum.com

## nEXT TURBOMOLECULAR PUMPS





## EDWARDS THE PARTNER OF CHOICE

Edwards is a world leader in the design, technology and manufacture of vacuum pumps, with over 100 years' history and more than 80 years' manufacturing experience.

We believe in delivering results that bring value to our customers by using our breadth of industry experience to identify and apply solutions to your problems. Using the most innovative and up-to-date modelling techniques and know-how, we can optimise the pumping configuration to achieve the maximum performance in the most reliable and cost-effective way.

# CONTENTS

INNOVATION AND RELIABILITY	04
PERFORMANCE YOU CAN RELY ON	06
nEXT55 AND nEXT85 TURBOMOLECULAR PUMP	08
nEXT240, nEXT300, nEXT400 TURBOMOLECULAR PUMP	11
nEXT730, nEXT930, nEXT1230 TURBOMOLECULAR PUMP	14

## INNOVATION AND RELIABILITY

Edwards nEXT is the ultimate experience in turbomolecular pumps

nEXT turbomolecular pumps are built on decades of experience and are drawing from our tried and trusted EXT and STP ranges. nEXT pumps offer superior performance, reliability and end user serviceability, setting the benchmark for scientific turbomolecular pumps.

#### **Superior performance**

Exceptional pumping speeds and compression ratios

Proven reliability for peace of mind Huge install base of turbo pumps

Flexible solutions Bespoke design service available Ease of use Integrated intelligent controls

**Extended lifetime and low cost of ownership** Fully end user serviceable

Large variety of standard variants Enhanced customer choice



nEXT55



nEXT85



nEXT240



nEXT300



nEXT400



nEXT730



nEXT930



nEXT1230

## APPLICATIONS

	nEXT55	nEXT85	nEXT240	nEXT300	nEXT400	nEXT730	nEXT930	nEXT1230
Research & Development				ĺ	ĺ	ĺ		
Chamber evacuation, coating systems, turbomolecular pump systems		~	~	~	~	~	~	~
High Energy Physics								
Beam Lines, accelerators, mobile pump carts, turbomolecular pump backing, laser evacuation, medical systems		~	~	~	~	~	~	~
Mass Spectrometry								
GCMS, LCMS, ICPMS, MALDI, inorganic MS, RGA, surface science, leak detectors		~	~	~	~	~		
Electron Microscopy								
TEM, SEM, EPMA, SPM sample prep benches	~	~	~	~	~			
Industrial								
Glove boxes, coating systems, XRD/XRF systems, Leak testing, energy, furnaces, medical technologies		~	~	~	~	~	~	~

You can be assured Edwards has the application expertise and vacuum solution to meet your needs.

## ADVANCED TECHNOLOGY

nEXT has been designed to combine all the latest technological advances in turbomolecular pumps with some new thinking in design for manufacture, delivering a truly class leading product.

The nEXT platform brings a high level of modularity to offer maximum flexibility for customer application and requirements. Each pump is available in different internal configurations to offer differing functionality and performance.

Our nEXT pumps come in different variants "D" Duplex comes with both turbomolecular and drag stages for improved tolerance to higher backing line pressures. The "D" variants offer superior pumping speed and compression across all gas species. Triplex "T" variants feature turbomolecular, drag and Edwards unique regenerative pumping stages for the ultimate in compression ratio and boost technology for unique vacuum system rationalisation.

The "H" variant has been physically tuned to offer an improvement where an application has focus on light gas compression.


		NW40	DN63 ISO-K	DN63-ISO CF	DN100 ISO-K	DN100 ISO CF	DN160 ISO-K	DN160 ISO CF	DN200 ISO-K	DN200 ISO CF	DN200 ISO-F
nEXT55D		x*	х	х	x*						
nEXT85D	nEXT85H	х	х	x	х						
nEXT240D	nEXT240T				х	х					
nEXT300D	nEXT300T				х	х					
nEXT400D	nEXT400T						х	х			
nEXT730D							х	х	х	х	
nEXT930D									х	х	
nEXT1230H									х	х	х

nEXT is available in eight models with a range of inlet flange sizes


\*Available by special order

## PERFORMANCE YOU CAN RELY ON

The compact design of nEXT allows for close pitch positioning in multiple pump installations. Offering superior performance in a smaller space envelope. Compatible with Edwards TIC and TAG controllers.

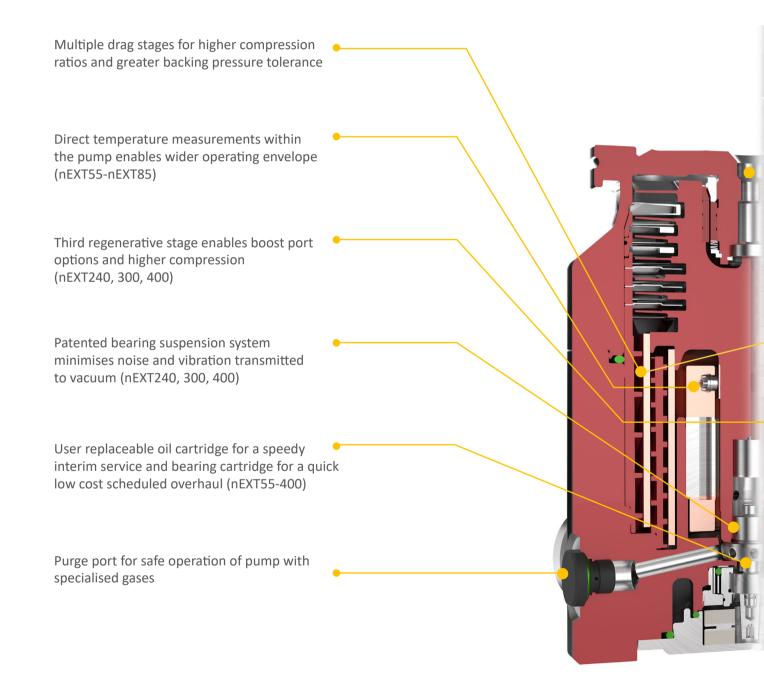

nEXT85 turbomolecular pump sectional view

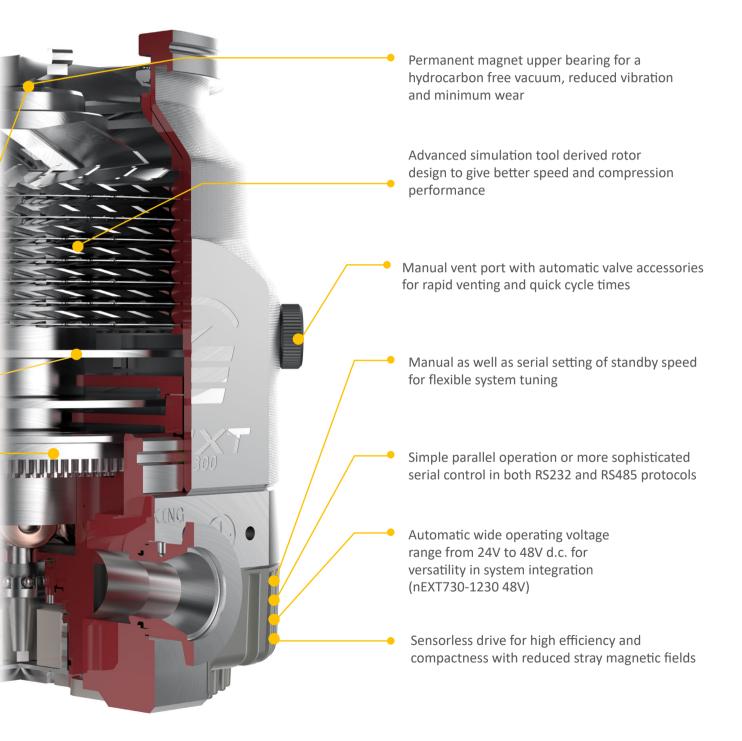

nEXT300 turbomolecular pump sectional view

## nEXT55 AND nEXT85 TURBOMOLECULAR PUMP

The nEXT55 and nEXT85 are the most compact pumps of the nEXT range with a significantly reduced height and improved performance in a smaller package. These pumps offer pumping speeds of 55 I/s and 85 I/s for nitrogen, they provide a high pumping density, greater than other pumps in its class, with almost double the pumping speed of similar sized turbo pumps.

The rotor has been designed to optimise pump performance and achieve both higher speeds and higher compression while maintaining high levels of reliability and low risk to adoptors. As with all the pumps in the nEXT range field maintenance is only required every 4 years of operation, and this including replacement of the bearing can be performed by the end user.

nEXT55 and nEXT85 bring with them the benefits in flexibility with comprehensive communication and control options available, as well as a full set of accessories, the ideal choice in deployable instruments or portable applications where a compact footprint or lower weight are key factors.






## TECHNICAL SPECIFICATIONS

		nEXT55		nEXT85			
Inlet flange		DN63 ISO-K or DN63 CF	NW40	DN63 ISO-K or DN63 CF	DN100 ISO-K		
	Nz	55	47	84	86		
	Ar	55	44	80	84		
Inlet pumping speed Is <sup>-1</sup>	Не	41	61	78	80/78 (D/H)		
	H₂	27	49/44 (D/H)	60/54 (D/H)	60/54 (D/H)		
	N₂/Ar		>1 x	10 <sup>11</sup>			
Compression ratio (D)	Не	6.9 x 10 <sup>5</sup>		8 x 10 <sup>6</sup>			
	H2	2.9 x 10 <sup>4</sup>		2 x 10 <sup>5</sup>			
	N₂/Ar	NA	>1 x 10 <sup>11</sup>				
Compression ratio (T/H)	Не	NA	2 x 10 <sup>7</sup>				
	H2	NA	5 x 10 <sup>5</sup>				
Backing/interstage/boost ports		NW16					
Vent/purge port			1/8″	BSPP			
Critical backing pressure (D/H)	mbar		1	.8			
Critical backing pressure (T)	mbar		Ν	IA			
Bake out water cooled/forced air cooled max.	°C		120,	/115°			
Recommended backing pump*			nXI	DS6i			
Normal rotational speed (rpm)		90,000					
Start time to 90% speed (sec) D/H (T)			90				
	ISO	2.47	2.9	3.0	3.2		
Mass (kg) D/H (T)	CF	3.5		4.4			


\*A smaller backing pump may be used depending on application.


### DIMENSIONS

#### nEXT55

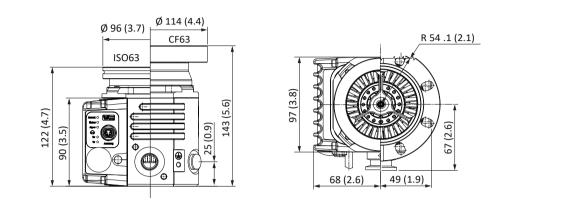

#### nEXT85

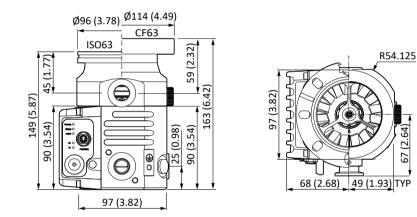

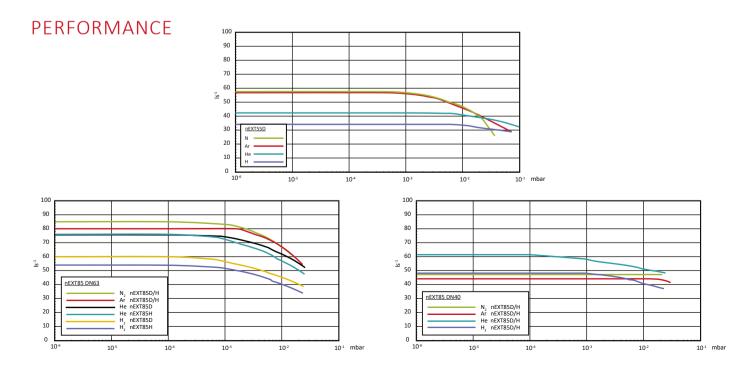

## nEXT240, nEXT300, nEXT400 TURBOMOLECULAR PUMP

The innovative nEXT240, nEXT300 and nEXT400 pumps, have been designed to provide high vacuum performance in a compact size.

The range offers a wide variety of sizes and variants giving OEMs and end users a greater choice and the flexibility to tailor the most appropriate vacuum solution to meet their individual needs.

Each is available in two variants: the D-Type combines turbo and drag stages; and the T-Type adds Edwards unique fluid dynamic stages and the option of additional booster ports for increased system rationalisation. See Boost technology custom interface splitflow variants are also available in three sizes for further vacuum system optimisation.

The pumps feature a field replaceable oil cartridge and bearing assembly and the user is notified as to when service intervention is required. This enables easy maintenance as users can carry out servicing in-house, which reduces the cost of ownership.

The efficient pumps have low power consumption and also feature a standby mode, which allow users to make further energy savings. nEXT240-300-400 pumps have extra low vibration and low magnetic field signature variants for sensitive electron microscope applications.

The compact design means the pumps fit together neatly in high product density applications. They are easy to configure and have an intelligent control interface accepting a 24 to 48Vdc input power supply voltage range and can be controlled using a simple parallel control or serial communications in both RS232 or RS485 formats.







## **BOOST TECHNOLOGY**

For our Analytical Instrument Customers the "T" variants of nEXT240,300,400 employ a unique regenerative pumping stage which can be used to 'boost' the performance of the backing pump. This offers a much simplified vacuum solution with greatly improved pumping speeds and system power reduction. The examples below shows how boost can be used to either reduce the size of the primary pump or increase the gas flow into the instrument on a differentially pumped system. It also illustrates how the number of turbo pumps required can be reduced from two discrete pumps to a single splitflow pump with two inlets to achieve the same vacuum performance.


Customers in general laboratory and R&D applications will also benefit from the improved compression achieved with the "T" variant. To take maximum advantage of boost technology, please contact Edwards.

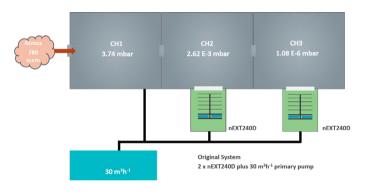


Original System

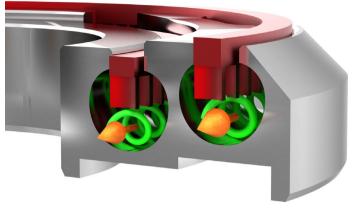

Regenerative stage

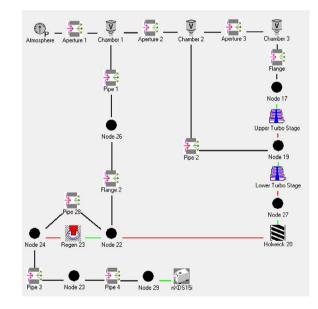

Screenshot taken from TransCalc HSM

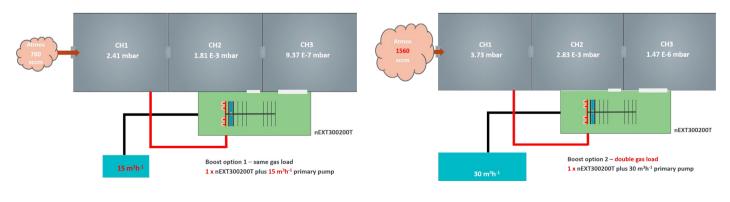

Boost Option 1

Boost Option 2


### TECHNICAL SPECIFICATIONS


		nEXT240	nEXT300	nEXT400
Inlet flange		DN100 ISO-K or DN100 CF	DN100 ISO-K or DN100 CF	DN160 ISO-K or DN160 CF
	Nz	240	300	400
	Ar	230	280	380
Inlet pumping speed Is <sup>-1</sup>	Не	230	340	390
	H₂	165	280	325
	N₂/Ar	>1 x 10 <sup>11</sup>	>1 x 10 <sup>11</sup>	>1 x 10 <sup>11</sup>
Compression ratio (D)	Не	3 x 10 <sup>5</sup>	1 x 10 <sup>6</sup>	1 x 10 <sup>8</sup>
	H₂	1 x 10 <sup>4</sup>	5 x 10 <sup>4</sup>	5 x 10⁵
	N₂/Ar	>1 x 10 <sup>11</sup>	>1 x 10 <sup>11</sup>	>1 x 10 <sup>11</sup>
Compression ratio (T/H)	Не	1 x 10 <sup>6</sup>	3 x 10 <sup>6</sup>	>1 x 10 <sup>8</sup>
	H2	1.5 x 10 <sup>4</sup>	1 x 10 <sup>5</sup>	1 x 10 <sup>6</sup>
Backing/interstage/boost ports		NW25	NW25	NW25
Vent/purge port		1/8" BSPP	1/8" BSPP	1/8" BSPP
Critical backing pressure (D/H)	mbar	9.5	9.5	10
Critical backing pressure (T)	mbar	20	20	20
Bake out water cooled/forced air cooled max.	°C	120/115°	120/115°	120/115°
Recommended backing pump*		RV12/nXDS10i	RV12/nXDS10i	RV12/nXDS10i
Normal rotational speed (rpm)		60,000	60,000	60,000
Start time to 90% speed (sec) D/H (T)		115 (150)	145 (190)	180 (210)
	ISO	5.7 (6)	5.7 (6)	6.5 (6.8)
Mass (kg) D/H (T)	CF	8.8 (9.1)	8.5 (8.8)	9.5 (9.8)


\* A smaller backing pump may be used depending on application.

### DIMENSIONS


#### nEXT240D

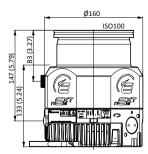


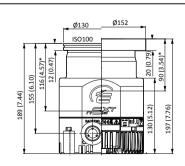


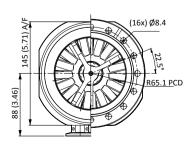


#### nEXT300D

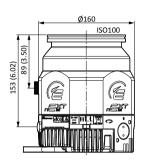


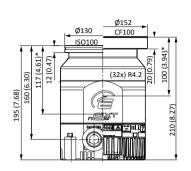


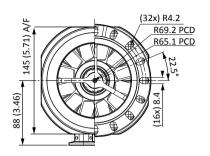


#### nEXT400D

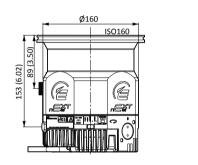


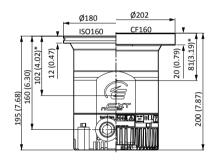

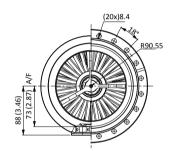

#### PERFORMANCE

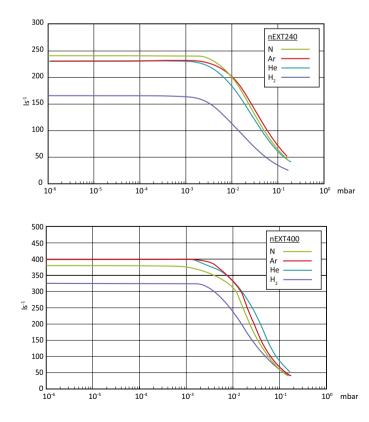

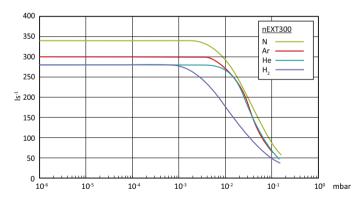

## nEXT730, nEXT930, nEXT1230 TURBOMOLECULAR PUMP

With the nEXT730, nEXT930 and nEXT1230 turbomolecular pumps Edwards provides larger pumps offering nitrogen pumping speeds of 730, 925 and 1250 l/s respectively.

As well as addressing the general R&D market, where high pumping speeds are often required, these pumps are also designed to meet the requirements of the coating market and other diffuse market sectors such as Heat treatment, furnace applications, E-beam welding, Etch, Ion implant, Degassing and Cylinder evacuation.

For our OEM customers, derivative versions of these products including split flow variants can be developed to match specific applications.

These compact pumps are able to operate in any orientation, and are supported by a full range of accessories for cooling, venting, powering and control.

The pumps feature bearings with a typical life time of at least 4 years with no maintenance. When required, a bearing replacement can be undertaken by the customer themselves or they can take advantage of our other service support options.








## TECHNICAL SPECIFICATIONS

		nEXT	730D	nEXT	930D	nEXT1230H			
Inlet flange		DN 160 ISO-K	DN 160 CF	DN 200 ISO-K	DN 200 CF	DN 200 CF	DN 200 ISO-F	DN 200 ISO-K	
Main inlet pumping speed									
	N2	730		92	25	1250			
to be a superior and the	Ar	66	55	86	55		1150		
Inlet pumping speed Is <sup>-1</sup>	He	82	20	90	)5		1350		
	H₂	71	15	73	35		1150		
Gas throughput									
	N₂		1	14			12		
Gas throughput mbar Is <sup>-1</sup>	Ar		3	.5			4		
	Не		2	21			>20		
	H₂	>> 14					>20		
Peak compression ratio backing port to m	ain inlet por	t							
	N2	> 1x10 <sup>11</sup>							
Compression ratio	Ar	> 1x10 <sup>11</sup>							
	He	1,2x10 <sup>8</sup>				4 × 10+8			
	H₂	4,0x10°				1 x 10+7			
Ulimate pressure with 2-stage oil sealed rotary vane pump ISO-K/CF	mbar	< 3,5x10 <sup>-9</sup>	< 6x10 <sup>-10</sup>	< 3,5x10 <sup>-9</sup>	< 6x10 <sup>-10</sup>	<5 x 10 <sup>-10</sup>	<5 >	x 10 <sup>-9</sup>	
Backing/interstage/boost ports					NW40				
Normal rotational speed	rpm		49	200			42 000		
Start time to 90% speed (sec) D/H (T)	min		2	5			3		
Cooling water consumption	l/h				60				
Critical backing pressure	mbar				6				
Mass (kg) D/H (T)	kg	14.6	19.6	15.4	21.7	32.6	24.9	23.7	
Recommended backing pump*					nXRi, XDS35i,	E2M28*			
Bake out water cooled/forced air cooled max.	°C	n/a	100	n/a 100 n/a			/a		
Vent/purge port			G 1/8"						


\*Please contact your local representative to discuss the correct option for your application.


### DIMENSIONS

#### nEXT730D

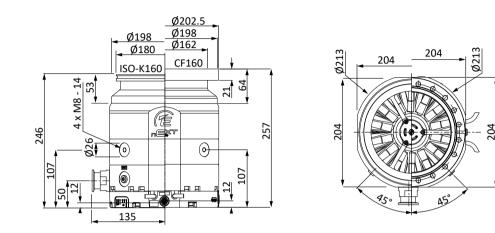



#### nEXT930D

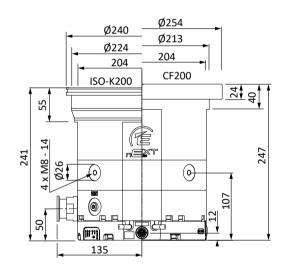

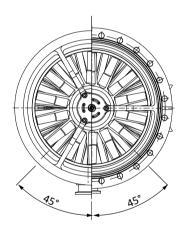


#### nEXT1230H

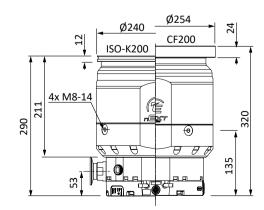

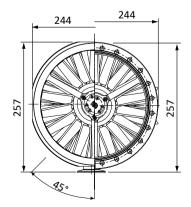

#### PERFORMANCE

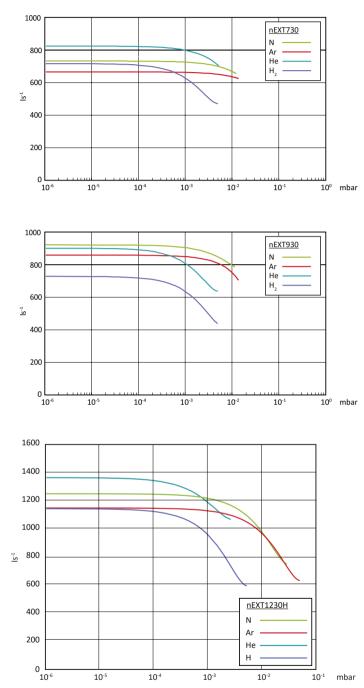

#### BESPOKE PRODUCT DEVELOPMENT

With Edwards, you can quickly and accurately create the perfect vacuum solution for your needs. When an off the shelf pump will not meet your requirements for space or performance, our Bespoke Product Development (BPD) team will develop a customised vacuum solution to turn your requirement into reality.

At Edwards, a partnership approach is taken to system design, and it all starts with a vacuum expert gathering your application details: what pressures you wish to achieve, what gas flows you have, how much space is available etc. Our expert then uses a number of in-house and publicly available modelling tools at his disposal to optimise your vacuum system. Developed by our Analytical Services group, these tools are used to model complete vacuum systems from atmosphere down to ultra-high vacuum (UHV). This software has been developed to give rapid simulation of the behaviour of the proposed vacuum solution to ensure that it perfectly meets your requirements.

Accurate computer modelling offers you the chance to streamline your development cycle, avoiding a costly iterative approach and delivering a quicker time to market. Please contact Edwards to take advantage of this service.



### CONTROLLERS AND ACCESSORIES

The TIC (Turbo and Instrument Controller) automatically recognises and supports one turbomolecular pump from the nEXT range, One backing pump (nxds, or diaphragm) plus three Edwards active gauges on top of that Cooling and vent valve support is provided directly from the controller. Backing pump power is provided for a compact 24V diaphragm pump (on 200W versions only), or where greater pumping speeds are required, nXDS and large XDS pumps can be controlled directly via the backing pump connector on a TIC 200 mains backing pumps (up to RV12) may be controlled via an optional relay box.

The relay box can also be used to control a mains heater band and backing line isolation valve. Time delays and normal speed signals may be used to control events such as turbo start and there is a comprehensive selection of protection and safety interlock features. The TIC turbo controller may be either rack or bench mounted and provides a useful hub for the flexible operation of a wide range of vacuum system configurations.





The **TAG (Turbo and Active Gauge)** controller is a small, compact, low cost pumping system controller, which is suitable for a wide range of vacuum applications. It is a 24V controller that is compatible with all Edwards nEXT turbomolecular pumps. In addition to a turbomolecular pump it can control a backing pump, a vent valve, an air cooler and an Edwards active gauge. The TAG is controlled by an easy to use interface. A large clear LED display shows the pump speed or vacuum pressure. The compact size of the controller is ideal for use on benchtops or suitable mobile platforms.




### END USER SERVICEABLITY

New technologies employed in nEXT have enabled the pumps to be serviced by the end user in the field. An oil lubrication cartridge change can be performed where fitted, typically in less than 5 minutes. A full bearing change can also be performed by the end user in around 10 minutes on all nEXT pumps. Both with the minimum of specialist tooling. These simple interventions will, in many cases, mean that the pump never requires a full return to base service during its lifetime.

nEXT turbomolecular pumps will advise the user when a service is due and what level of intervention is required. The user is alerted to a service request by a simple flashing LED sequence on the pumps and by serial comms notification.

Flexibility is again key as these simple services can be performed either by the end user, on site by an Edwards field service technician, or the pump can be returned to an Edwards service hub.

Using remote diagnostics, a user can interrogate the pump to determine how long it is to the next service so that a proactive approach to preventative maintenance can be planned.

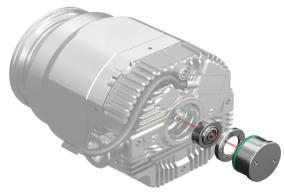

nEXT55, 85, 240, 300, 400



nEXT730, 930 and 1230

### PROLONGED PEACE OF MIND

Extending the new equipment warranty gives you a simple opportunity to add peace of mind to your purchase of new equipment, should a fault occur as a result of a manufacturing defect, equipment is expressly repaired or replaced.

Cover is available on many of our products allowing the original factory warranty to be extended from 12 months to 2 years and beyond.

### YOUR GLOBAL PARTNER

We understand the importance of local support. Edwards has a number of major service facilities located throughout the world, each location is supported by an extensive team of engineers and technicians to provide local, rapid response and great value service. All our service operations are conducted at the highest international standards in accordance with ISO9001 (Quality), ISO14001 (Environmental), and OHSAS18001 (Workplace safety).



## ORDERING INFORMATION

Pumps:

Product description	Order number
nEXT55D NW40 NW16 80W	B8E210A01
nEXT55D CF63 NW16 80W	B8E210C01
nEXT55D ISO63 NW16 80W	B8E210B01
nEXT55D ISO100 NW16 80W	B8E210101
nEXT85D ISO63 NW16 80W	B8G210B01
nEXT85D CF63 NW16 80W	B8G210C01
nEXT85D ISO100 NW16 80W	B8G210101
nEXT85D NW40 NW16 80W	B8G210A01
nEXT85D ISO100 NW25 80W	B8G240101
nEXT85iD ISO63 NW16/16 80W	B8G211B01
nEXT85iD ISO63 NW16/25 80W	B8G214B01
nEXT85H ISO63 NW16 80W	B8G410B01
nEXT85H CF63 NW16 80W	B8G410C01
nEXT85H NW40 NW16 80W	B8G410A01
nEXT85iH CF63 NW16/16 80W	B8G411C01
nEXT85H ISO100 NW16 80W	B8G410101
nEXT240D ISO-K100 160W	B81200100
nEXT240D CF100 160W	B81200200
nEXT240T ISO-K100 160W	B81300100
nEXT240T CF100 160W	B81300200
nEXT300D ISO-K100 160W	B82200100
nEXT300D CF100 160W	B82200200
nEXT300T ISO-K100 160W	B82300100
nEXT300T CF100 160W	B82300200
nEXT400D ISO-K160 160W	B83200300
nEXT400D CF160 160W	B83200400
nEXT400T ISO-K160 160W	B83300300
nEXT400T CF160 160W	B83300400
nEXT730D ISO-K160 NW25	B8J200300
nEXT730D CF160 NW25	B8J200400
nEXT930D ISO-K200 NW25	B8K200D00
nEXT930D CF200 NW25	B8K200F00
nEXT1230H CF200 NW40	B8N4A0F00
nEXT1230H ISO-F200 NW40	B8N4A0E00
nEXT1230H ISO-K200 NW40	B8N4A0D00
nEXT1230H CF200 NW40 INV	B8N4A0FU0
nEXT1230H ISO-F200 NW40 INV	B8N4A0EU0
nEXT1230H ISO-K200 NW40 INV	B8N4A0DU0

Other insterstage port positions available upon request

## ORDERING INFORMATION

#### Accessories and spares:

Pump		Product description	Order number
		TAG controller	D39592000
	Controller (1)	TAG power supply	D39592800
		TIC 200 turbo and instrument controller	D39721000
		WCX85 water cooling kit (4 position)	B8G200833
	Cooling	ACX85 air cooler connector fitted	B8G200820
		N/O TAV5 vent valve connector fitted	B8G200834
	Venting	N/C TAV5 vent valve connector fitted	B8G200835
nEXT55/85		CF63 flange heater 110 V	B8G200823
IILX133/03	Bakeout	CF63 flange heater 240 V	B8G200824
		Oil cartridge kit	B8G200828
	Service	Bearing and oil cartridge kit	B8G200811
		Bearing replacement tool kit	B8G200845
	Miscellaneous	Accessory "Y" adaptor	B8G200837
		Accessory cable 90 degree/extension	B8G200836
		Accessory connector bare wired	B8G200839
		nEXT85/EXT75DX base mounting adaptor	B8G200838
		TAG controller	D39592000
	Controller (1)	TAG power supply	D39592800
		TIC100 turbo and instrument controller	D39722000
		nEXT radial air cooler	B58053175
	Cooling	nEXT axial air cooler	B58053185
		nEXT water cooler	B80000815
		CF100 flange heater 100-120 V	B58052773
nEXT240/ 300/400	Bakeout	CF100 flange heater 200-240 V	B58052774
500,100	Dakeout	CF160 flange heater 100-120 V	B58052775
		CF160 flange heater 200-240 V	B58052776
	Venting	TAV5 solenoid operated vent valve	B58066010
		Oil cartridge tool kit	B80000812
	Service	Bearing tool kit	B80000805
		Oil cartridge	B80000811
		Bearing and oil cartridge	B80000810

### ORDERING INFORMATION

Accessories and spares:

Pump		Product description	Order number	
		TAG controller	D39592000	
	Controllers	TAG power supply	D39592800	
		TIC100 turbo and instrument controller	D39721000	
	Cooling	Air cooling nEXT730/930 /1230 radial	B8J200800	
		Water cooling nEXT730/930, 1/4"	B8J200820	
		N/O TAV5 vent valve connector fitted	B8G200834	
	Venting	N/C TAV5 vent valve connector fitted	B8G200835	
		Vent port adaptor	B58066011	
		Center ring w. prot. screen DN200 ISO-K coarse	B8J200807	
		Center ring w. prot. screen DN200 ISO-K fine	B8J200808	
		Coarse inlet screen DN 200 CF	B8J200809	
	Inlet screens	Fine inlet screen DN 200 CF	B8J200810	
	iniet screens	CF160 coarse inlet screen	B80000823	
		CF160 fine inlet screen	B80000824	
		ISO160 coarse inlet screen	B80000825	
		ISO160 fine inlet screen	B80000826	
	Service	Bearing replacement kit	B8J200827	
	Service	Bearing replacement tooling	B8J200845	
nEXT730/		Mains input cable 3m UK	B8J200814	
930/1230	Mains input cable	Mains input cable 3m EU	B8J200812	
		Mains input cable 3m US	B8J200813	
		EPS 800	B8J200819	
		3m EU (mains cable) EPS 800, IP54 protected	B8J200829	
		3m EU (mains cable) EPS 800, IP54 protected	B8J200830	
		3m EU (mains cable) EPS 800, IP54 protected	B8J200831	
		nEXT 3m extension cable for EPS 800	B8J200824	
	Power supply	nEXT 5m extension cable for the EPS 800	B8J200825	
	to pump	Cable nEXT supply 48VDC 1m	B8J200821	To connect the EPS 800 power supply to the pump
		Cable nEXT supply 48VDC 3m	B8J200822	To connect the power supply to the pump
		Cable nEXT supply 48VDC 5m	B8J200823	To connect the power supply to the pump
		nEXT 1m open end cable	B8J200815	To connect a 3rd party power supply to the pump
		nEXT 3m open end cable	B8J200816	
		nEXT 5m open end cable	B8J200817	
		EPS 800 mount kit to place the power supply directly on the pump	B8J200832	
		Accessory "Y" adaptor	B8G200837	
	Miscellaneous	Accessory cable 90 degree/extension	B8G200836	
		Accessory connector bare wired	B8G200839	
		1 m pump to controller cable	D39700835	
Extensi	Extension cables	3 m pump to controller cable	D39700836	
		5 m pump to controller cable	D39700837	
		2 m electrical supply cable UK plug	D40013025	
All	Power cables <sup>(1)</sup>	2 m electrical supply cable EU plug	D40013030	
		2 m electrical supply cable US plug	D40013120	
		Vent port adaptor	B58066011	
	Miscellaneous	PRX10 purge restrictor	B58065001	
		TIC relay	D39711805	

(1) Denotes need second annotation 730 and bigger pumps need their own power supply required accessory. Others optional depending on application.



#### Global contacts

EMEA	
UK	+44 1444 253 000
	(local rate) 08459 212223
Belgium	+44 1293 60 3350
France	+33 1 4121 1256
Germany	0800 000 1456
Italy	+ 39 02 48 4471
Israel	+ 972 8 681 0633
	+7 495 933 55 50
	Ext. 1800/1803
	+8 200 775 20 99

#### ASIA PACIFIC

China India Japan Korea Singapore

#### AMERICAS

SA 'azil

#### +1 800 848 9800

Publication Number: 3601 0091 01 © Edwards Limited 2021. All rights reserved Edwards and the Edwards logo are trademarks of Edwards Limited.

Whilst we make every effort to ensure that we accurately describe our products and services, we give no guarantee as to the accuracy or completeness of any information provided in this brochure.

Edwards Ltd, registered in England and Wales No. 6124750, registered office: Innovation Drive Burgess Hill, West Sussex, RH15 9TW, UK.